

UNIVERSAL DISHWASHER POWER CORD SD69012

- 5.4 FT
- 3 WIRE/13 AMP
- EASY TO INSTALL
- INCLUDES WIRE NUTS
- MOLDED ON STRAIN RELIEF FOR SAFETY
- ANGLE PLUG

KIT CONTENTS
3 UL Listed Wire Nuts
Power Cord



ELECTRICAL CONNECTION INSTRUCTIONS

For your safety, read instructions completely and carefully.

WARNING: Potential fire and shock hazard.

Important information: If you have doubts or are unfamiliar with this type of installation work, seek the services of a qualified Service Technician or Electrician.

- Supplying Demand assumes no responsibility for installation of Appliance Cords
 - Turn appliance to off position before inserting plug
 - Wiring errors can cause damage to appliance, result in fire, or cause fatal shock.
 - Do not use an extension cord
 - Do not use if cord is damaged, cut, worn, or frayed.
 - Do not exceed electrical ratings
-



13A
125/250V SJT16/3C

WARNING: This product contains chemicals, including lead, known to the state of California to cause cancer and birth defects, or other reproductive harm. Wash hands after handling.

UNIVERSAL DISHWASHER POWER CORD SD69011

STEP 1: Read the installation instructions that come with your appliance completely. Make sure you have purchased a cord that matches the manufacturer's specifications and meets applicable building and/or electrical Standards and Codes.

STEP 2: Locate cord set entry hole and access plate. If required, carefully remove knockout to indicated diameter.

STEP 3: Insert cord, connector end first, snap the plastic retainer end into the knockout hole.

STEP 4: Securely attach connector ends of cord to the appliance in accordance to the installation instructions. Reinstall access plate.

STEP 5: Before plugging new cord into electrical outlet, check continuity of grounding connection between the metal frame of the appliance and the center pin on the cord by using a self-energized circuit tester or other acceptable indicating device.



SUPPLYING DEMAND[®]
supplyingdemand.org



@therepairbrand | supplyingdemand