

INSTALLATION INSTRUCTIONS FOR RADIANT HEAT ELEMENTS



CAUTION: BEFORE STARTING INSTALLATION, TURN OFF POWER AT THE BREAKER OR FUSE PANEL. FAILURE TO DO SO MAY RESULT IN SEVERE INJURY.

RECOMMENDED TOOLS

- Needle Nose Pliers
- 1/4" Nut Driver

These instructions are not meant to replace the advice of a trained service technician. Before starting installation, check the manufacturer's user manual for specific instructions and best practices.

1. Disconnect the range from the power source.
2. Open range door and remove screws located underneath the top panel of the range.
3. Once screws are removed, lift up the cooktop panel and brace it with a support so it doesn't fall.
4. Locate the old radiant heat element you are replacing. The element is usually held by clips, using the needle nose pliers, pull out the clips. Then gently remove the radiant heat element.
5. Unclip the hot cooktop indicator light from the panel allowing easy access to the element wiring.
6. Take note of the order of which wire is connected to which terminal on the element to make reinstallation process easier. Using needle nose pliers, detach the wires connected to the radiant heat element.
7. Take the new radiant heat element, attach the wires to their respective terminals on the new element using the needle nose pliers.
8. Make sure to plug back in the hot cooktop indicator light to the panel.
9. Line up the surface element to the clip holes and attach each clip using the needle nose pliers.
10. Once element is secured with the clips, remove the support holding the cooktop panel and gently lower the panel back on the frame of the range.
11. Reattach the screws that were removed.
12. Reconnect the range to the power source.



SUPPLYING DEMAND®