




DRYER THERMOSTAT & FUSE KIT SD279973

WARNING: Disconnect power from the breaker and unplug appliance before servicing. Replace all panels before operating. Failure to do so can result in personal injury, damage to the appliance, electrical shock, or death.

KIT CONTENTS

- Thermostat
- Fuse

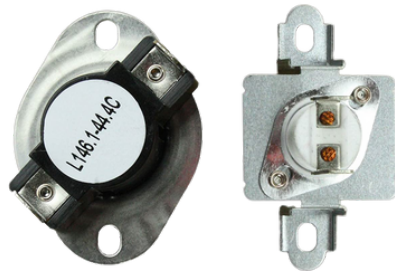

NOTE: This kit can only be installed on 29" and 27" electric dryers. Do not install this kit on compact dryers or 24" over/under laundry products or gas dryers.

In addition to replacing the thermal cutoff and the hi-limit thermostat, make the following checks:

STEP 1: Disconnect power at the breaker and unplug the dryer

STEP 2: Check for a failed or damaged heating element

STEP 3: Check for electrical continuity across both terminals of the heat element

STEP 4: Check for any/all causes for heat element to be on with no or low air flow:

- Plugged lint screen
- Blocked, clogged, or kinked exhaust vent
- Exhaust vent is too long, too many elbows, less than 4" in diameter
- Inoperative flapper on exhaust hood
- Blower wheel not in place or not turning with motor
- Check 1M-2M motor switch contacts. These should be open when the dryer is off
- Heat circuit timer contacts must be open when the timer is in the OFF position.